

Tree Top Wireless Inspection Camera – Sept.2018



New for 2018 - extension pole mountable wireless camera is designed for looking into nest boxes & tree hollows. Cable free wireless transmission.

Smart battery pack provides up to 7 hours run time & can be changed in the field, spare Smart battery are available. Charge using your car phone charger.

Live video from the camera is viewed remotely on the 5" LCD monitor which also records photos & video. Monitor has an internal rechargeable battery.

BATTERY POUCH:

Using cable ties, attach the battery pouch at the top of the extension pole positioned as shown in the photo. Cable tie around pole to prevent pouch sliding downward.

Smart - lithium ion battery pack:



Press the **ON** button once, the blue leds indicate battery's *state of charge*, 4 leds = Full 100% charged. Press button twice to turn **OFF**.

Two USB sockets are located on the top: –

1. **IN** USB micro - **Charging Input** 5 volt DC (5v phone charger)
2. **OUT** USB type A - **Power to Camera** (camera connection only)

CHARGING PROCEDURE:

Unplug camera connect a 5 volt/ 2 amp phone charger to the **USB micro** socket labelled **IN** on the top of the Smart battery. Charging is automatic: blue leds indicate progress, when fully charged 4 blue leds are lit – disconnect charge cable. Charge time is around 3 hours.


To maximise battery life: Recharge the *Smart* battery pack & the LCD monitor as soon as possible after use & every 3 months when not in use. Do not store devices in a discharged state for extended periods. No warranty applies to batteries.

Precautions:

- Do not leave devices unattended when charging
- Monitor charging by regularly observing the charge indicators
- Do not place on dashboard of vehicle – to avoid overheating
- *Smart* batteries & LCD Monitors are not waterproof

Website: www.starweb.com.au

LCD Wireless Monitor - :

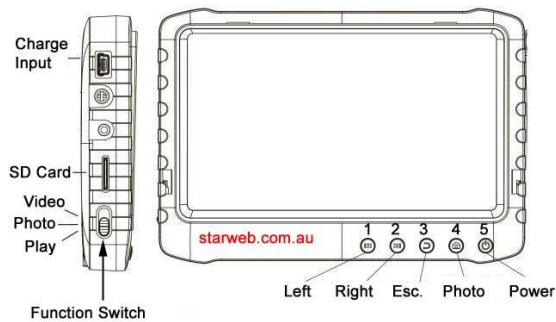

Hold down the **POWER** button until the screen comes **ON**. Battery icon indicates the monitor battery's state of charge, 4 x white bars = 100% charge. SD card icon indicates if a SD card is installed & its free space. Date/ Time information is displayed in red. Video or Camera icon indicates recording mode. Hold down the **POWER** button until the monitor shuts **OFF**.

Set the function switch on the side of the Monitor to record **Video** or capture **Photo**. Wireless LCD monitor has an internal rechargeable battery. Charge by connecting a 5 volt 2 amp USB phone charger to the **USB mini** socket on the side of the monitor.

Using the Inspection Camera - :

Insert charged *Smart* battery into pouch, attach camera to extension pole & plug its USB cable into the USB socket labelled **OUT** on the *Smart* battery. Camera will power up with the white led illuminator **ON**, blue leds on *Smart* battery will be lit. Secure pouch flap. To turn camera **OFF** press *Smart* battery button twice.

On the Monitor; attach the antenna then hold down the **POWER** button until the LCD screen comes **ON**, live video from the camera should be visible on the LCD screen.

RECORDING PHOTOS or VIDEO:

The Monitor records either photos or video depending upon the position of the Function switch. **In PHOTO mode** - a photo is captured each time the PHOTO button is pressed. **In Video mode** - recording starts when the PHOTO button is pressed & is paused when the button is pressed a second time.

Mute:

To toggle audio On/Off holding down the Esc button till the "MUTE" message appears on the display.

You can view or download photos / videos to PC or laptop via USB. Connect the USB cable, turn monitor **ON** wait for **USB Connect ...**message. View files in folder **DCIM**. Turn monitor **OFF** before disconnecting the USB cable.



- Switch Camera **OFF** when not in use to avoid overheating & possible damage.
- Switch Monitor **OFF** when not in use to conserve battery power.

Smart battery will automatically switch **OFF** when it becomes discharged. Recharge as soon as practical.

Unplug the Camera from the *Smart* battery when not in use.
Do not transport with camera Powered **ON**

Changing the Date/ Time - LCD Monitor - :

Move the Function switch located on the side of the Monitor to the PLAY position. Depress POWER button until the screen comes ON. With **System** option highlighted press the Photo button to access the *System screen*, with Date Time highlighted press the Photo button again to access the *Date Time* screen.

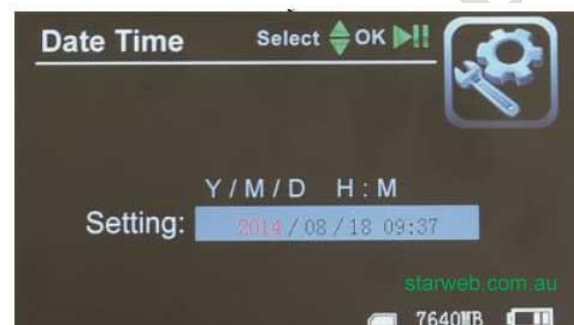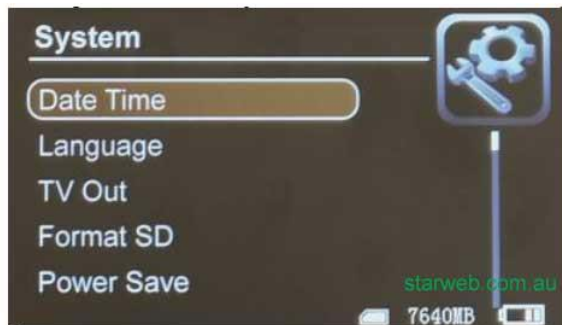

Changing the Date/ Time:

On the **Date Time screen** (see above right) you can edit the numbers in red. Use the Left Right buttons to increase/ decrease the year, press Photo button to accept the change & move to the month option. Left Right buttons to increase/ decrease the month & Photo button to save, repeat this procedure edit the other settings. Press Escape button to save new Date Time & exit.

Move the Function switch back to either Photo or Video when finished.

Contact sales@starweb.com.au or Howard 0400755431

Website: www.starweb.com.au