

# Tree Top Wireless Inspection Camera 5W – Jan.2019



Our extension pole mountable wireless camera is designed for inspecting nest or bat boxes & tree hollows.

Its Sony HAD camera transmits live video which can be viewed & recorded remotely on the handheld LCD monitor.

Powered by a Smart battery pack that provides up to 7 hours run time.

## Mount the Battery Pouch:

Using 2 x cable ties, attach the battery pouch close to the top of the extension pole as shown in the above photo. Secure firmly to prevent pouch sliding downward.

## Using the Inspection Camera:-


### 1. The Camera

Insert a charged *Smart* battery into the pouch. Screw the camera housing onto extension pole. Plug the USB power cable from the camera into the USB socket labelled **OUT** on the top of the *Smart* battery.

White led illuminator will come **ON** & the blue leds on *Smart* battery will be lit. Secure battery pouch flap.

### 2. The LCD Monitor

**POWER UP CAMERA BEFORE THE LCD MONITOR.** Open the sun shade, hold down the **POWER** button (5) on the LCD Monitor until the screen comes **ON**, live video from the inspection camera should be visible.

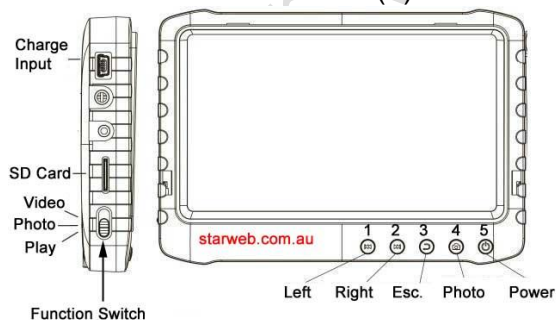

### On Screen Displays:

**Battery icon**- 4 white bars = 100% charged. **SD card icon**- card installed & its free space. **Video / Camera icon**- recording mode photo or video. **Auto B8**- current operating frequency.

## SET PHOTO or VIDEO OPTION:-

Slide the **Function** switch **UP** to record video or to the **Centre** position for photos.

## CAPTURE A PHOTO or RECORD VIDEO:-

Press **Photo** button (4) to capture a photo. In **Video** mode - recording starts when the PHOTO button is pressed & is paused when the button is pressed again.

### Mute:

Toggle audio On/Off by holding down the Esc button, a *Mute* message is displayed.

## POWER OFF PROCEDURE:-

**TURN OFF THE LCD MONITOR BEFORE THE CAMERA.** Hold down the POWER button until the LCD Monitor shuts OFF.

Unplug the camera's USB power cable from the top of the Smart battery pack.



## DOWNLOAD PICTURES/ VIDEOS:-

1. With the LCD Monitor OFF eject the micro SD card, use a card reader to transfer required image files to your PC.
2. Connect the USB cable, turn monitor **ON** wait for **USB Connect ...**message. View files in folder **DCIM**. Turn monitor **OFF** disconnect the USB cable.

## Changing the Date/ Time - LCD Monitor:-

Move the Function switch located on the side of the Monitor to the **PHOTO** position. Depress POWER button until the screen comes ON.

With **System** option highlighted press the Photo button to access the **System screen**, with Date Time highlighted press the Photo button again to access the **Date Time screen**.

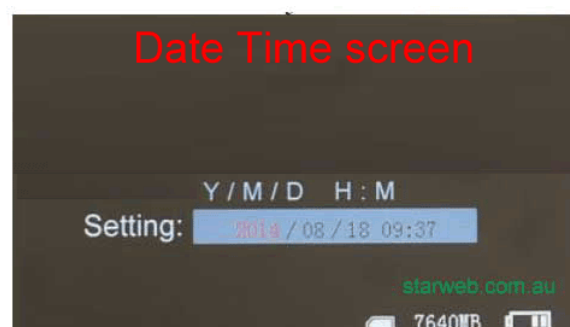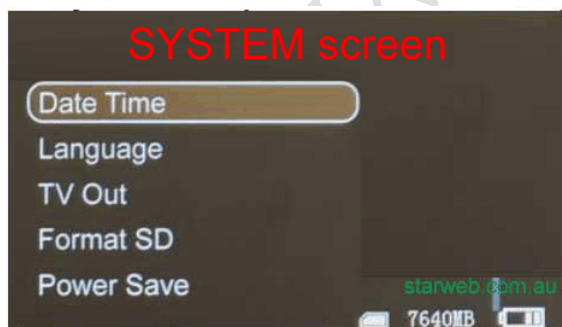

### Editing the Date/ Time:

On the **Date Time screen** – year is highlighted red - Use the Left Right buttons 1 & 2 to increase/ decrease the year, press Photo button to accept the change & move to the month option. Left Right buttons to increase/ decrease the month & Photo button to save, repeat this procedure edit the other settings. Press **Escape** button 3 to save new Date Time & exit.

Move the Function switch back to either Photo or Video when finished.

## Smart - Battery CHARGING PROCEDURE:

Smart battery will automatically switch **OFF** when it becomes discharged during use. To turn camera OFF press Smart battery button twice or unplug camera's USB cable from battery.



**CHARGING:** Connect a 5 volt/ 2 amp phone charger to the **USB micro** socket labelled **IN** on the top of the Smart battery. Charging is automatic; blue leds indicate progress, when fully charged 4 blue leds are lit. Charge time is around 3~4 hours.

Two USB sockets are located on the top: –

1. **IN** USB micro - **Charging Input** 5 volt DC (5v phone charger)
2. **OUT** USB type A - **Power to Camera** (camera connection only)

## LCD Monitor CHARGING PROCEDURE:



- Monitor must be **OFF** during charging
- Connect a 5 volt/ 2amp USB phone charger into the USB mini charge input socket on the side of the monitor
- Charge time is 2 ~3 hours

### Precautions:

- Do not leave devices unattended when charging
- Do not place on dashboard of vehicle – to avoid overheating
- Smart batteries & LCD Monitors are not waterproof
- Switch Camera **OFF** when not in use to avoid overheating & possible damage.
- Switch Monitor **OFF** when not in use to conserve battery power.

Charge every 3 months when not in use. Do not store devices in a discharged state for extended periods. **NO WARRANTY APPLIES FOR BATTERIES or DAMAGE RESULTING FROM BATTERY FAILURE.**

Contact [sales@starweb.com.au](mailto:sales@starweb.com.au) or Howard 0400755431

Website: [www.starweb.com.au](http://www.starweb.com.au)